


## COLOMBI Micro - Manual Spring Separator

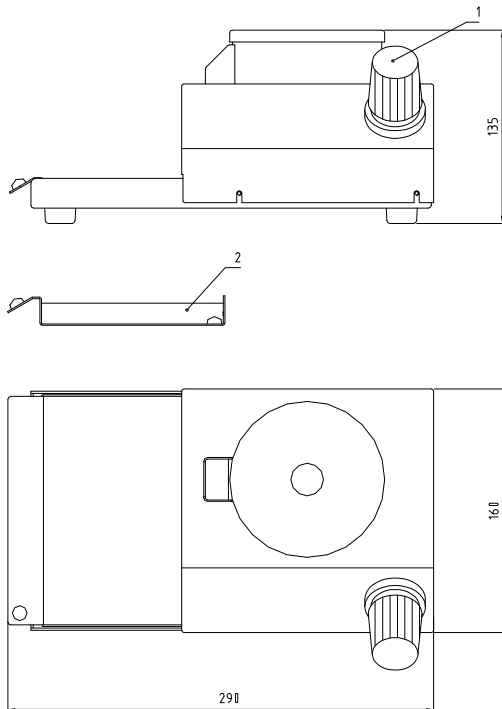

1) Air Regulator, 2) Tray

### INSTRUCTIONS FOR USE

Connect the air to the air inlet. The pressure should be 3-6 bars.

The tangled springs are placed in the container. By applying slight pressure on collecting tray, the air flow will put the springs in motion and the untangled springs will come out on the tray.

To reduce or increase the output, adjust the air pressure with the air regulator. Any springs still tangled are once again put into the container.

Note that the capacity for different kinds of springs may vary. Always begin separation with a small amount of springs. This is particularly important for springs of fine wire or springs with hooks or loops.